Quick Snap Installation




Locate Quick Snap mount plate & mount screws



Line up shaft with the largest hole and secure using the mount screws



Loosen the drive pulley lock screws and slide onto shaft with lock screws up

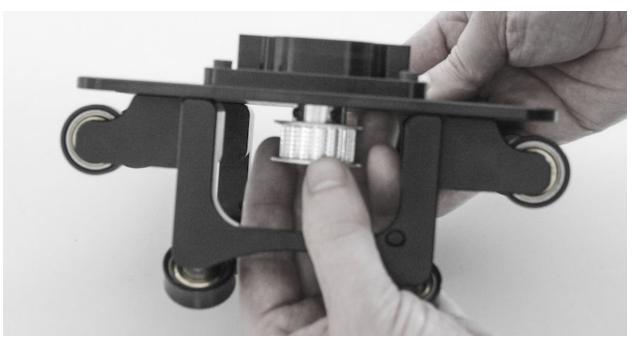


Line the top of the drive pulley with the bottom of the plate



Firmly secure the two lock screws locking the pulley onto the shaft



Locate the two idler pulleys

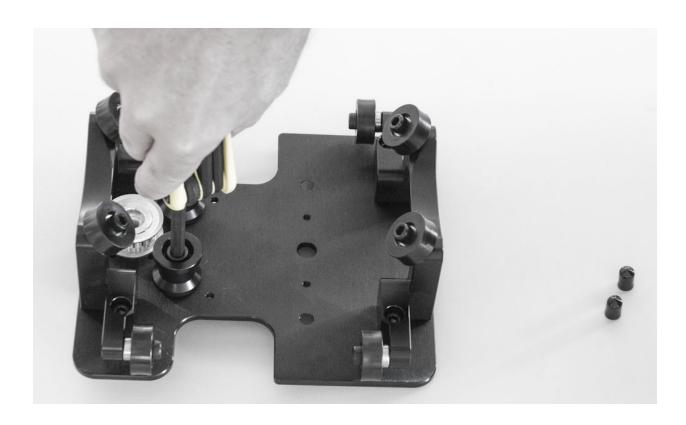

Remove and dis-guard the caps that hold the idler assembly together and secure the two idler pulleys onto the bottom of the cart.



Locate the motor, snap motor mount and 4 mount screws



Line the motor mount holes up with the 4 taps on the face of the motor



Prepare the screws in the mount holes





Firmly secure the screws with a standard Phillips screwdriver

To mount the motor line the flat part of the motor shaft with the inner flat of the quick snap shaft



Line the motor mount bracket up with the quick snap plate and press to 'snap' into place. To un-mount the motor simply pull it out of the plate.